2D Desktop Barcode Scanner

Full Manual

V2.7.07

Content

Enable/Disable Configuration 4
Version No. 4
Factory Default Setting 4
User Configuration 4
Data Interface 5
USB Keyboard Layout 5
RS232 Interface Configuration 13
GS Control Character Replacement 15
Control Character Output 16
Scan Mode 16
Decoding Mode 17
Repeat Barcode Detection 17
LED Indicator Light 18
Buzzer Configuration 18
Volume Setting 18
Decode Success Sound Setting 18
Prefix and Suffix Configuration 20
Start Character 20
Terminal Character 20
Custom Prefix 21
Custom Suffix 22
Code ID 22
AIM ID 23
Data Edition 24
Field Length Configuration 24
Inverse Color Barcode Setting 25
Non-standard Barcode Option 26
Barcode Type Selection 26
Enable/Disable All barcodes 26
Enable/Disable All 1D barcodes 26
Enable/Disable All 2D barcodes 27
Codabar 27
Code 39 28
Code 32(Enable code39 first) 29
Matrix 2 of 5 (4-24bits) 33
Code 93 33
Code 11 34
Code 128 35
GS1-128 36
ISBT 36
UPC-A 36

UPC-E 37
EAN/JAN-8 39
EAN/JAN-13 39
GS1 DataBar (RSS14) 41
MSI 42
Febraban 43
PDF417 44
Micro PDF417 45
QR Code 45
Micro QR 46
Data Matrix 47
Aztec Code 47
Hanxin Code 48
Appendix 49
Data and Edit barcode 49
Barcode Type ID Table 51
AIM ID Table 52
Visible Character ASCII Table 52
Control Character Set (RS232,USB,VCP) 55
Configuration Instructions For Part Of Functions 56

Enable/Disable Configuration

Scanner only can be set when configuration function is enabled.



Enable Configuration Function (Default)



Disable Configuration Function

Version No.



Version Number

Factory Default Setting



Restore Factory Default Configuration

User Configuration

Save current parameters as user’s configuration.



Save

Reset scanner to user’s configuration.



Restore User Configuration

Data Interface



USB-KBW (Default)



RS232



USB Virtual Com(*driver is needed)

USB Keyboard Layout

Control Character Escaping



Enable Escaping Mode 1



Enable Escaping Mode 2



Disable (Default)

CR/LF Setting(USB-KBW)



Only 0A(LF) line feed



Only 0D (CR) line feed (Default)



0A(LF) and 0D(CR) both line feed

USB Keyboard Transfer Speed

Set the data transfer speed under USB-KBW interface. If the PC is an old version with lower performance, please choose low transfer speed to ensure the accuracy of data transfer.



Low (Default)



Middle



High



Custom Sending Speed (2ms~50ms)

Convert Case



Original data (Default)



Case Inversion



All Convert to Upper Case



All Convert to Lower case

Keyboard Layouts



English (United States)
(Default)



French (France)



Italian (Italy)



Italian 142 (Italy)



German (Germany)



Spanish (Spain)



Spanish (Latin America)



Finnish



Japanese



Russian (MS)



Russian (typewriter)



Arabic (101)



Irish



Polish (214)



Polish (Programmers)



Dutch (Netherlands)



Czech (QWERTZ)



Portuguese (Portugal)



Portuguese (Brazil)



Swedish (Sweden)



Turkish Q



Turkish F



Greek (MS)



French (Belgium)



English (UK)



Hungarian



Hungarian 101-KEY



Vietnamese



Slovak

Numeric Keyboard



Disable Numeric Keyboard Output(Default)



Enable Numeric Keyboard Output

Virtual Keyboard

Mode 1: Disable output characters between 0x20 to 0xFF by virtual keyboard.
Enable output characters between 0x00~0x1F by control characters definition(refer to Appendix).

Model 2: Enable output characters between 0x20 to 0xFF by virtual keyboard.
Enable output characters between 0x00~0x1F by control characters definition(refer to Appendix).

Model 3: Enable output characters between 0x00～0xFF by virtual keyboard



Turn Off (Default)



Turn On (Mode 1)



Turn On (Mode 2)



Turn On (Mode 3)

Select Host System In Virtual Keyboard Mode



WINDOWS (Default)



MAC OS



LINUX

Barcode Encoding Configuration

Generally, the barcodes encoding can be identified accurately.
Please set suitable encoding configuration if there have unique characters, to ensure correct data output.



Auto (Default)



KOI8-R code



Japanese Shift-JIS



Traditional Chinese big 5

Output Encoding Format

To output data under specified encoding format, the corresponding mode needs to be set.



English/Latin-1 (Default)



GBK (Notepad/excel)



UNICODE (Word)



Japanese Shift-JIS



UTF-8



Traditional Chinese big 5 (Notepad/excel)

RS232 Interface Configuration

Baud Rate



4800



9600 (Default)



19200



38400

57600

115200

Data Bit, Stop Bit, Parity Bit

7 Bit, 1 Stop Bit, No Parity

7 Bit,1 Stop Bit, Even Parity

7 Bit,1 Stop Bit, Odd Parity

7 Bit, 2 Stop Bit, No Parity

7 Bit, 2 Stop Bit, Even Parity

7 Bit,2 Stop Bit, Odd Parity



8 Bit,1 Stop Bit, No Parity(Default)



8 Bit,1 Stop Bit, Even Parity



8 Bit,1 Stop Bit, Odd Parity



8 Bit,2 stop Bit, No Parity



8 Bit,2 Stop Bit, Even Parity



8 Bit,2 Stop Bit, Odd Parity

GS Control Character Replacement



Do Not Replace (Default)

Please set ‘Virtual keyboard (Mode 1 or Mode 1 or Mode 3)’ if output character is ‘Ç’



Replace Ç



Replace |



Replace ^]



Replace]



Replace <GS>

Control Character Output



Disable



Enable

Scan Mode



Auto Sensing Mode 1(Default)



Auto Sensing Mode 2

Decoding Mode



Normal Mode



1D Quick Scanning Mode

Repeat Barcode Detection

Setting for the interval time of decoding the same barcode, scanner will only decode the same barcode one time if not exceeding the set time.



500ms



750ms (Default)



1s



2s

LED Indicator Light



Off



On (Default)

Buzzer Configuration

Volume Setting



Low



High (Default)

Start Sound Setting



Off



On (Default)

Decode Success Sound Setting



Off



On (Default)

Decode Success Tone Setting



1 (Default)



2



3



Custom

Decode Success Sound Duration Setting



Long (Default)



Short

Error Warning Tone Setting

Scanner will make four consecutive error warning sounds if data transmission failed, and a single error warning sound if the unrecognizable configuration code is scanned.



Low (Default)



Middle



High

Prefix and Suffix Configuration

Start Character



None (Default)



STX

Terminal Character



None



Enter



LF



CR/LF (Default)



TAB



ETX

Custom Prefix

Output Options



On



Off (Default)

Edit



Clear All Custom Prefix

Set Custom Prefix

(Please refer to the appendix Code ID and ASCII table for setting)

Custom Suffix

Output Options

On

Off (Default)

Edit

Clear All Custom Suffix

Set Custom Suffix

(Please refer to the appendix Code ID and ASCII table for setting)

Code ID

Output Options

Disable(Default)



Enable Code ID In Front Of Barcode



Enable Code ID Behind Of Barcode

Edit



Set Custom Code ID

(Please refer to appendix ID type table, data and edit barcode)



Clear All Custom Code ID

AIM ID



Off (Default)



Enable AIM ID In Front Of Barcode



Enable AIM ID Behind Of Barcode

Prefix And Suffix Order Setting

Prefix



Start Character+CODE ID+AIM ID+Custom Prefix (Default)



Start Character+ Custom Prefix + CODE ID+AIM ID

Suffix



Custom Suffix+CODE ID+AIM ID+Terminal Character (Default)



CODE ID+AIM ID+Custom Suffix+Terminal Character

Data Edition

The data edition function can customize the barcode data to three fields(Start/Center/End) by configuring the Start/End field length.

Note: Custom prefix/suffix, start characters, end characters, CODE ID, AIM ID and other non-barcode contents will not be affected by the data edition function.

Field Length Configuration



Set Start field length



Set End field length

Transfer Configuration



Transfer the full Data field



Only transfer the Start field



Only transfer the Center field



Only transfer the End field

Inverse Color Barcode Setting

(Only 1D/DataMatrix/Aztec)



Normal Color



Inverse Color



Both (Normal/Inverse)

Non-standard Barcode Option

When non-standard barcode decoding enabled, scanner can be better compatible with some non-standard barcodes, but the probability of reading errors will increase.



Disable(Default)



Enable

Performance Testing Mode(Temporary configuration, invalid when restart)



Enable Performance Testing Mode

Barcode Type Selection

Enable/Disable All barcodes



Enable All



Disable All

Enable/Disable All 1D barcodes



Enable All



Disable All

Enable/Disable All 2D barcodes



Enable All



Disable All

Codabar



Enable



Disable

Codabar Start/End Character Transfer



Disable(Default)



Enable

Set Length Range for Codabar



Minimum Length (0~50bits)



Maximum Length (0~50bits)

Code 39



Enable



Disable

Code 39 Check Bit



Disable (Default)



Enable But Not Transfer



Enable & Transfer

Code 39 Full ASCII



Enable



Disable (Default)

Code39 Start/End Character Transfer



Enable



Disable (Default)

Set Length Range for Code 39



Minimum (0~50bits)



Maximum (0~50bits)

Code 32(Enable code39 first)



Enable



Disable

Code 32 Prefix



Enable



Disable

Interleaved 2 of 5 (ITF25)



Enable



Disable

Interleaved 2 of 5 (ITF25) Check Bit



Disable (Default)



Enable But Not Transfer



Enable & Transfer

Interleaved 2 of 5 (ITF25) Length Setting



Random Length (6-50bits) (Default)



6 Bits



8 Bits



10 Bits



12 Bits



14 Bits



16 Bits



18 Bits



20 Bits



22 Bits



24 Bits

Set Length Range for Interleaved 2 of 5



Minimum (0~50bits)



Maximum (0~50bits)

Industrial 2 of 5



Enable



Disable

Set Length Range for Industrial 2 of 5



Minimum (0~50bits)



Maximum (0~50bits)

Matrix 2 of 5 (4-24bits)



Enable



Disable

Set Length Range for Matrix 2 of 5



Minimum (0~50bits)



Maximum (0~50bits)

Code 93



Enable



Disable

Set Length Range for Code 93



Minimum (0~50bits)



Maximum (0~50bits)

Code 11



Enable



Disable (Default)

Code 11 Check Bit Output



Enable



Disable (Default)

Code 11 Check Bit Setting



Disable (Default)



1 Bit



2 Bits

Set Length Range for Code 11



Minimum (0~50bits)



Maximum (0~50bits)

Code 128



Enable



Disable

GS1-128



Enable



Disable

Set Length Range for Code-128



Minimum (0~50bits)



Maximum (0~50bits)

ISBT



Enable(Default)



Disable

UPC-A



Enable



Disable

UPC-A Check Bit Output



Enable(Default)



Disable

UPC-A Leading Characters



UPC-A convert to EAN-13(Output Country Code+System Characters)



Output System Characters(Default)



Disable

UPC-E



Enable



Disable

UPC-E Check Bit Output



Enable(Default)



Disable

UPC-E Expand to UPC-A



Enable



Disable (Default)

UPC-E Leading Digits



Output Country Code+System Characters



Output System Characters(Default)



Disable

EAN/JAN-8



Enable



Disable

EAN-8 Convert to EAN-13



Disable



Enable

EAN-8 Check Bit Output



Enable(Default)



Disable

EAN/JAN-13



Enable



Disable

EAN 13 Check Bit Output



Enable(Default)



Disable

UPC/EAN/JAN Additional Code



Disable(Default)



Only Read UPC/EAN/JAN Additional Code



Both Read UPC/EAN/JAN and UPC/EAN/JAN Additional Code

EAN13 Convert to ISBN



Enable



Disable (Default)

EAN13 Convert to ISSN



Enable



Disable (Default)

GS1 DataBar (RSS14)



Enable



Disable

GS1 DataBar Limited



Enable



Disable

GS1 DataBar Expanded



Enable



Disable

MSI



Enable



Disable(Default)

MSI Check Bit Output



Enable



Disable

MSI Check Bit Setting



1 Check Bit



2 Check Bits

MSI 2 Check Bits Setting



MOD10/MOD10(Default)



MOD10/MOD11

MSI Code Reading Length Setting



Minimum Reading Length(0-50digits)



Maximum Reading Length(0-50digits)

Febraban

Note: Please disable AIM ID function before opening Febraban function.

Enable/Disable Febraban Code(ITF25)



Enable



Disable(Default)

Enable/Disable Febraban Code(Code128)



Enable



Disable(Default)

Febraban Check Bit



Enable



Disable(Default)

PDF417



Enable



Disable

Set Length Range for PDF417



Minimum



Maximum

Micro PDF417



Enable



Disable

Set Length Range for Micro PDF417



Minimum



Maximum

QR Code



Enable



Disable

QR Code URL Link



Disable



Enable

Set Length Range for QR Code



Minimum



Maximum

Micro QR



Enable



Disable

Set Length Range for Micro QR



Minimum



Maximum

Data Matrix



Enable



Disable

Set Length Range for Data Matrix



Minimum



Maximum

Aztec Code



Enable



Disable

Set Length Range for Aztec Code



Minimum



Maximum

Hanxin Code



Enable



Disable(Default)

Set Length Range for Hanxin Code



Minimum(1-7833)



Maximum(1-7833)

Appendix

Data and Edit barcode



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



Cancel current setting



Cancel a string of data from previous read



Cancel the data from previous read



Save

Barcode Type ID Table

Code type	HEX	CODE
All codes	99	
Codabar	61	a
Code128	6A	j
Code32	3C	<
Code93	69	i
Code39	62	b
Code11	48	H
EAN-13	64	d
EAN-8	64	d
GS1 DataBar	52	R
GS1-128 (EAN-128)	6A	j
2 of 5		
Interleaved 2 of 5	65	e
Matrix 2 of 5	76	v
Industry 2 of 5/IATA	44	D
UPC-A	63	c
UPC-E	63	c
ISBN	42	B
ISSN	6E	n
MSI	6D	m

Aztec Code	7A	z
DataMatrix	75	u
PDF417	72	r
Micro PDF417	53	S
QR Code	51	Q
Micro QR Code	51	Q

AIM ID Table

Code type	AIM ID	Description
Codabar	]Fm	m：0~1
Code128	]C0	m：0，1，2，4
Code32	]A0	
Code93	]G0	
Code39	]Am	m：0，1，3，4，5，7
Code11	]Hm	m：0，1，3，8，9
EAN-13 / EAN-8	]Em	m：0，1，3，4
GS1 DataBar	]e0	
GS1-128 (EAN-128)	]C1	
Interleaved 2 of 5	]Im	m：0，1，3
Matrix 2 of 5	]X0	
Industry 2 of 5	]S0	
UPC-A / UPC-E	]Em	m：0，3
ISBN	]X0	
ISSN	]X0	
Aztec Code	]z0	
DataMatrix	]dm	m: 0~6
PDF417 / Micro PDF417	]Lm	m: 0~5
QR Code / Micro QR Code	]Qm	m: 0~6

Visible Character ASCII Table

Decimal	Hexadectimal	Character	Decimal	Hexadectimal	Character
32	20	<SPACE>	80	50	P
33	21	!	81	51	Q
34	22	“	82	52	R
35	23	#	83	53	S
36	24	$	84	54	T
37	25	%	85	55	U

38	26	&	86	56	V
39	27	‘	87	57	W
40	28	(	88	58	X
41	29	)	89	59	Y
42	2A	*	90	5A	Z
43	2B	+	91	5B	[
44	2C	,	92	5C	\
45	2D	-	93	5D	]
46	2E	.	94	5E	^
47	2F	/	95	5F	_
48	30	0	96	60	`
49	31	1	97	61	a
50	32	2	98	62	b
51	33	3	99	63	c
52	34	4	100	64	d
53	35	5	101	65	e
54	36	6	102	66	f
55	37	7	103	67	g
56	38	8	104	68	h
57	39	9	105	69	i
58	3A	:	106	6A	j
59	3B	;	107	6B	k
60	3C	<	108	6C	l
61	3D	=	109	6D	m
62	3E	>	110	6E	n
63	3F	?	111	6F	o
64	40	@	112	70	p
65	41	A	113	71	q
66	42	B	114	72	r
67	43	C	115	73	s
68	44	D	116	74	t
69	45	E	117	75	u
70	46	F	118	76	v
71	47	G	119	77	w
72	48	H	120	78	x
73	49	I	121	79	y
74	4A	J	122	7A	z
75	4B	K	123	7B	{
76	4C	L	124	7C	|
77	4D	M	125	7D	}
78	4E	N	126	7E	~
79	4F	O			

Control Character Setting (USB-KBW)

Decimal	Hexadecimal	Key Value (disable CODE ID escaping)	Key Value (enable CODE ID escaping)
0	00	reserve	Ctrl+@
1	01	Insert	Ctrl+A
2	02	Home	Ctrl+B
3	03	End	Ctrl+C
4	04	Delete	Ctrl+D
5	05	Page Up	Ctrl+E
6	06	Page Down	Ctrl+F
7	07	ESC	Ctrl+G
8	08	Backspace	Ctrl+H
9	09	Tab	Ctrl+I
10	0A	Enter(Output is influenced by the configuration of CR/LF)	Ctrl+J
11	0B	Caps Lock	Ctrl+K
12	0C	Print Screen	Ctrl+L
13	0D	Enter(Output is influenced by the configuration of CR/LF)	Ctrl+M
14	0E	Scroll Lock	Ctrl+N
15	0F	Pause/Break	Ctrl+O
16	10	F11	Ctrl+P
17	11	Direction key ↑	Ctrl+Q
18	12	Direction key ↓	Ctrl+R
19	13	Direction key ←	Ctrl+S
20	14	Direction key →	Ctrl+T
21	15	F12	Ctrl+U
22	16	F1	Ctrl+V
23	17	F2	Ctrl+W
24	18	F3	Ctrl+X
25	19	F4	Ctrl+Y
26	1A	F5	Ctrl+Z
27	1B	F6	Ctrl+[
28	1C	F7	Ctrl+\
29	1D	F8	Ctrl+]
30	1E	F9	Ctrl+^
31	1F	F10	Ctrl+_

Control Character Set (RS232,USB,VCP)

Decimal	Hexadecimal	Character
0	00	NUL
1	01	SOH
2	02	STX
3	03	ETX
4	04	EOT
5	05	ENQ
6	06	ACK
7	07	BEL
8	08	BS
9	09	HT
10	0A	LF
11	0B	VT
12	0C	FF
13	0D	CR
14	0E	SO
15	0F	SI
16	10	DLE
17	11	DC1
18	12	DC2
19	13	DC3
20	14	DC4
21	15	NAK
22	16	SYN
23	17	ETB
24	18	CAN
25	19	EM
26	1A	SUB
27	1B	ESC
28	1C	FS
29	1D	GS
30	1E	RS
31	1F	US

Configuration Instructions For Part Of Functions

Examples for Custom Prefix and Suffix:

The max number of characters for prefix/suffix are 10 characters. (In order to make sure the prefix and suffix to be output normally, please enable custom prefix or suffix first)

Example 1.1:

Set ’XYZ’ as prefix for all codes
Before setting, please search HEX value for all codes and it’s ‘99’ (Appendix: Barcode Type ID Table); ‘X’, ‘Y’, ‘Z’ HEX value is ‘58’, ‘59’ and ‘5A’ (Appendix: Visible Character ASCII Table)

Steps: Set ‘Custom Prefix’; Set ‘9’, ‘9’, ‘5’, ‘8’, ‘5’, ‘9’, ‘5’, ‘A’, ‘Save’(Appendix: Data and Edit Barcode).

If you need to revise the scanned data before save, please scan ‘Cancel The Data of Previous Reading’ or ‘Cancel The String Data of Previous Reading’ to reset.
If you need to give up setting, please scan ‘Cancel Current Setting’.

Example 1.2:

Set ”R” as prefix for QR
Before setting, please search HEX value for QR code and it’s ‘51’(Appendix: Barcode Type ID Table); ‘R’ HEX value is ‘52’ (Appendix: Visible Character ASCII Table)

Steps: Set ‘Custom Prefix’; Set ‘5’, ‘1’, ‘5’, ‘2’, ‘Save’(Appendix: Data and Edit Barcode).

Example 1.3:

Cancel Custom prefix for QR code

Steps: Set ’Custom prefix’, Set ‘5’, ‘1’, ‘Save’.
Note: If setting prefix for all QR codes, it will cover prefix settings for all QR codes prefix.
In contrast, if you need to cancel all prefix/suffix for all barcodes, please set ‘Clear All Custom Prefix’ and ‘Clear All Custom Suffix’.

Examples for Barcode Length Range Configuration

Please ensure the setting data would not exceed the setting range. Otherwise, the scanner will make error warning sound.

Example 2.1:

Set length range 4-12bits for Code 128
Steps: Set ‘Code 128 Minimum (0~50bits)’, Set ‘4’, Set ‘Save’, Set ‘Code 128 Maximum (0-50bits)’, Set ‘1’, ‘2’, Set ‘Save’.

Example 2.2:

Set random length for Code 39
Steps: Set ‘Code 39 Minimum(0~50bits)’, Set ‘0’, Set ‘Save’, Set ‘Code 39 Maximum(0-50bits)’, Set ‘0’, Set ‘Save’

Example for USB-KBW Transfer Speed Configuration

If the PC is an old version with lower performance, please choose low transfer speed to ensure the accuracy of data transfer, such as: 50ms
Steps: Set ‘Custom Transfer Speed’, Set ‘5’, ‘0’, Set ‘Save’.

Warning Sound


The scanner will make continuous 4 times error warning sound when data transferring is abnormal. Please check if the cable connection is normal.

Read Skills

To get a good reading performance, the aiming light needs to be aimed at the centre of barcode, and it can be aimed in any directions for convenient reading.

To read barcode correctly, if barcode is small, the scan window of the scanner need to be closed to the barcode, if barcode is big, the scan window of the scanner need to be far away from the barcode.

If the barcode is highly reflective(for example: coated surface), please adjust the scanning angle to read it successfully.

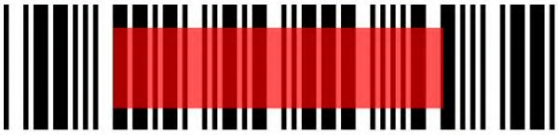



Safety

Please don’t use aiming light of the scanner to aim at eyes directly, to avoid causing any hurt or unwell feelings.